

HOW TO IDENTIFY THE DIFFERENT HOSES

549N - HAS A 2 POSITION RED LIGHTED ROCKER SWITCH THAT MOVES FORWARD AND BACKWARD. THE SWITCH IS REPLACED WITH A 3 POSITION BLACK SWITCH.

PART # 0937B-000 (Switch ONLY)

CH510 & CH610 – HAS A BLACK 3 POSITION ROCKER SWITCH THAT MOVES FORWARD & BACKWARD.

PART # 0937B-000 (Switch ONLY)

CH515 & CH615 – HAS A 3 POSITION BLACK ROCKER SWITCH THAT MOVES SIDE TO SIDE.

PART # 0901B-000

CH520 & CH620 – HAS A 3 POSITION OVAL SLIDE SWITCH THAT SLIDES FORWARD AND BACKWARD.

PART # 0892B-000

572 – HAS A RED PUSH BUTTON ON THE UNDERSIDE OF THE HANDLE.

PART # 9005A-000

CH230 & CH230L HAS A 2 POSITION BLACK ROCKER SWITCH ON THE UNDERSIDE OF THE HANDLE.

PART # 0017B-000

CH235 – HAS A 2 POSITION ROCKER SWITCH ON THE TOP OF THE HANDLE THAT MOVES FORWARD & BACKWARD.

PART # 0906B-000